


First of all, DPF soot level reset and adblue volume reset will be done when the vehicle is in the original. Then the emulator will be installed. Sockets will be pulled after emulator assembly.

<b>Emulator side</b>	<b>Vehicle side</b>
RED	To the Contact Line
BLACK	Chassis
YELLOW	Black and White Cable
GREEN	Pink White
WHITE	Brown
BROWN	To the White Wire

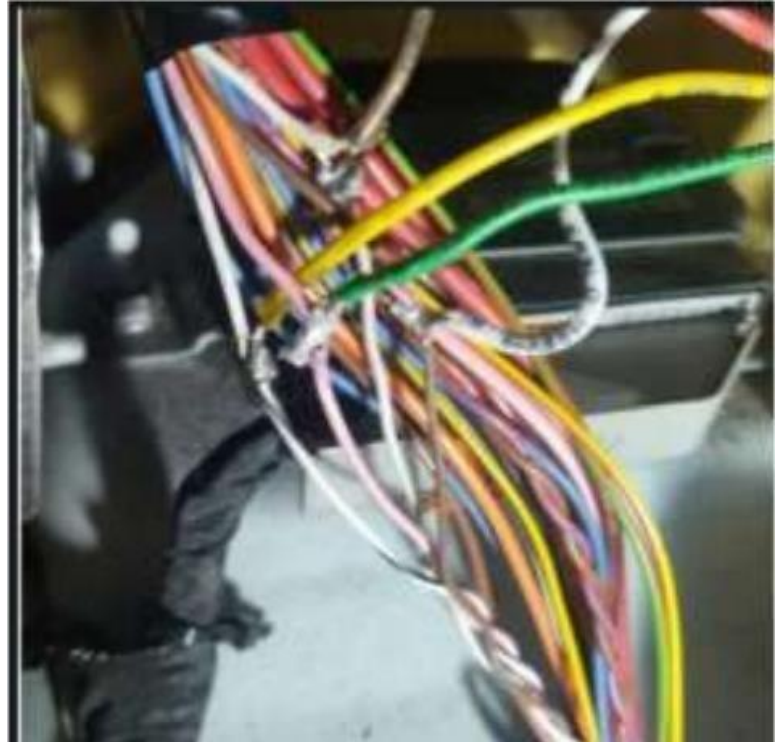



**Pull out PM sensor and downstream NOX sensor**



**Unplug the Adblue pump**



**Adblue Pump**

Model

- id-v5
- id-v6
- id-v5,5
- id-v6,2

Input: 12-24V

- POWER (+)
- POWER (-)

- CAN LOW
- CAN HIGH

- CAN LOW
- CAN HIGH

- CAN LOW
- CAN HIGH